

frida baby®

Push Pop  
Feeder



## Before Use

- Hand wash all components in warm soapy water, rinse well and dry prior to use.
- Remove cap prior to giving to child.

## How to Use/Fill

### Step 1:

Place pouch + collar assembly inside cap to load food into pouch.



### Step 2:

Fill food into pouch.



**TIP:** Use whole, chopped foods or thick purees in the pouch tips. Avoid overfilling which may cause food or liquid to leak during use.


**Step 3:**

Load pouch onto handle until clicked in place with the first notch. Remove cap before use.



**Step 4:**

Press down on the collar, using the second notch to keep food up top.

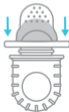

## Cleaning + Storage

- Foods can stain silicone. Clean all parts immediately after use.
- Hand wash parts using warm soapy water, or clean in the dishwasher on the top rack only.
- Safe to sterilize with microwave, boiling, or steam sterilizers. Allow product to cool before handling.
- Ensure product is fully dry and cool before giving to child.
- Store components out of reach of children.

## **WARNING:**

- Not a toy or a teether. Use only as intended.
- Small part / choking hazard. Check product condition regularly, discontinue use if feeder is worn, damaged, or ripped due to emerged teeth or normal wear + tear.
- Use only under adult supervision. Never leave the child unattended.
- Not intended to be used for administration of medicine.
- Do not place this device in the freezer.
- Risk of scalding or burning. Ensure food

and feeder are at a safe temperature prior to use.

- Not intended to be used in combination with other products. Do not attach the feeder to cords or tethers.

## **PRECAUTIONS:**

- Consult with a qualified medical professional before introducing new foods into your child's diet.
- Do not heat food while inside the product.

Feeder Questions?

[frida.com/help](https://frida.com/help)

FRIDABABY, FRIDA and all trademarks herein are the registered and unregistered trademarks of Fridababy, LLC.

© Fridababy, LLC 2023