

frida baby[®]

CONTROL THE FLOW BATH SPRAYER

USER MANUAL




SKIP THE SOAP OPERA

Tired of the same old bath time drama? The Control The Flow Bath Sprayer delivers a constant stream of water for worry-free rinsing without needing to refill a cup.

Simply toggle on and off between two pressure modes for controlled and precise rinsing. With an extra long hose and two cleaning attachments, you can reach every nook and cranny as you scrub-a-dub-dub.

Contents

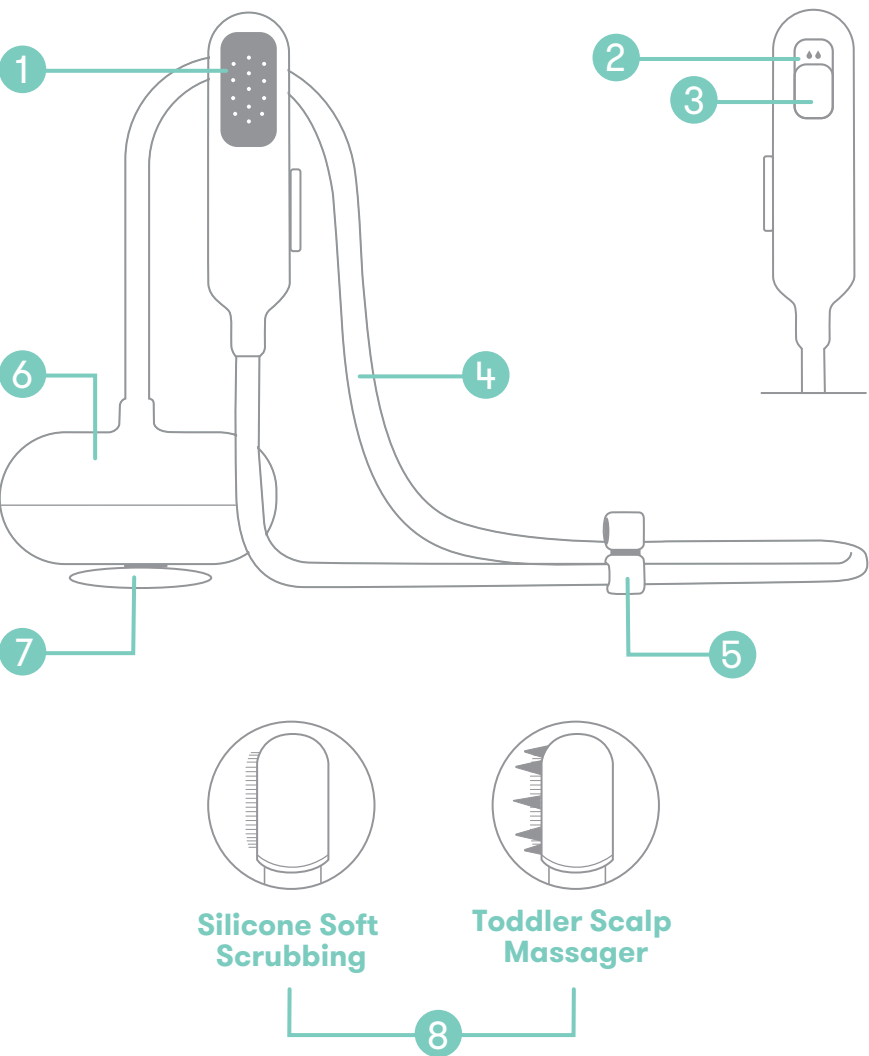


- 1 Sprayer (Spray Pattern)
- 2 Effective Rinse
- 3 Gentle Rinse
- 4 Hose
- 5 Organization Hook
- 6 Water Pump
- 7 Suction Cup
- 8 2x Scrubber Attachments

Product Components

What is included

- 1 sprayer w/ 2 different water flow rates
 - High and Low modes
- 1 Extra-long 36" hose length
- 1 Suction Cup
- 1 Organizing Hook
- 1 Silicone Soft Scrubber
- 1 Silicone Scalp Massager
- 4x AA batteries

 Soft silicone
bristle to
massage
baby's scalp



One-handed
secure control
to reach all
the nooks
and crannies

WARNINGS

- **Supervision Required:** Never leave a child unattended during bath time. This item is not a toy. Keep out of reach of children.
- **Long Cord:** Strangulation Hazard: Hose may strangle child if wrapped around their neck.
- **Water Temperature:** Always check the water temperature before using the sprayer on your baby to avoid scalding. Test it on the inside of your wrist before use.
- **Proper Installation:** Ensure all components of the sprayer are securely attached before use. An improperly attached sprayer can detach suddenly and cause injury.
- **Avoid Direct Spray to Face:** Never spray water directly onto your baby's face, especially around the nose and mouth, to prevent accidental inhalation or choking.
- **Inspect Before Use:** Regularly inspect the sprayer and hose for signs of wear, cracks, or damage. Do not use if any part is damaged.
- **Keep Away from Electrical Outlets:** Ensure the sprayer and hose are kept away from any electrical outlets or devices to avoid the risk of electric shock.
- **Use Only as Intended:** This product is designed for parent use with infants and children in a bathtub. Do not use it for any other purpose.
- **Not for drinking:** Do not drink from the sprayer or use to pump drinking water.
- **Dry Thoroughly:** After each use, dry the sprayer thoroughly to prevent the buildup of mold and mildew. See Care + Cleaning section for instructions.


WARNINGS

- **Secure Environment:** Ensure that the bathtub or bathing area is free of any slippery or sharp objects that could pose a risk to the baby.
- **Adjust Sprayer Settings:** Always start with the lower spray setting and gradually increase if needed, while monitoring your child's comfort.
- **Use Suction Cup Tab:** Be sure to use the suction cup tab when removing the pump housing from a flat surface to avoid damaging suction cup.
- **Caution:** Do not store submerged. Sprayer will break if water gets into the battery compartment.

Battery Safety:

- For optimal performance, we recommend using four AA alkaline batteries
- Ensure the battery compartment is securely closed and sealed before placing the sprayer near water.
- Removal and replacement of batteries must be carried out by an adult.
- Do not mix old and new batteries or different types of batteries (e.g., alkaline, lithium).
- Remove batteries if the sprayer will not be used for an extended period to prevent leakage.
- Dispose of used batteries properly according to local regulations. Do not dispose of batteries in fire as they may explode.


Replacing the Battery

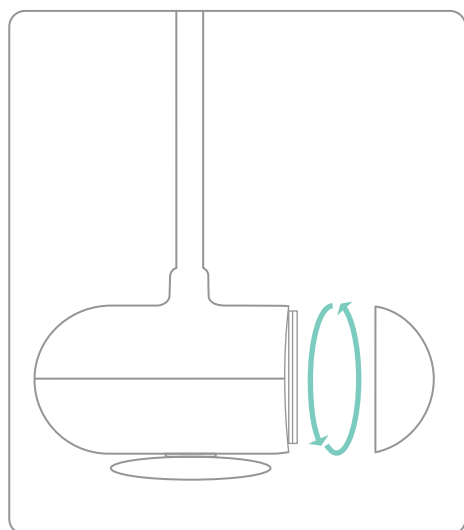

Step 1: Rotate the pump housing door counterclockwise to access the battery compartment.




Step 2: Behind the pump housing door, you will find a battery key.

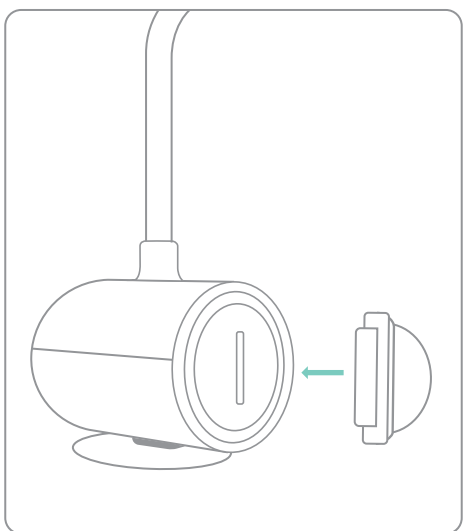


Step 3: Remove it to unscrew the battery door and access the batteries. If the battery door key is misplaced, a coin or flathead screwdriver can also be used.


Replacing the Battery

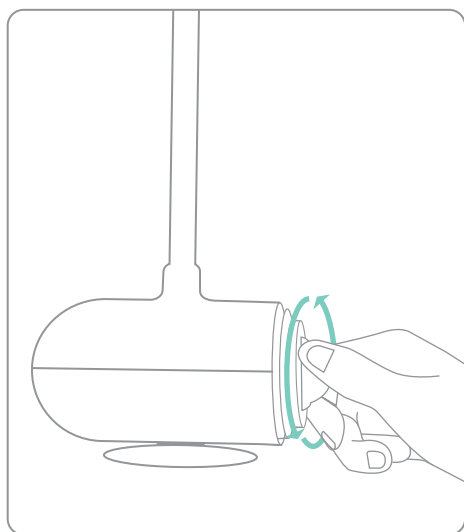

Step 4: Rotate the pump housing door counterclockwise to access the battery compartment.

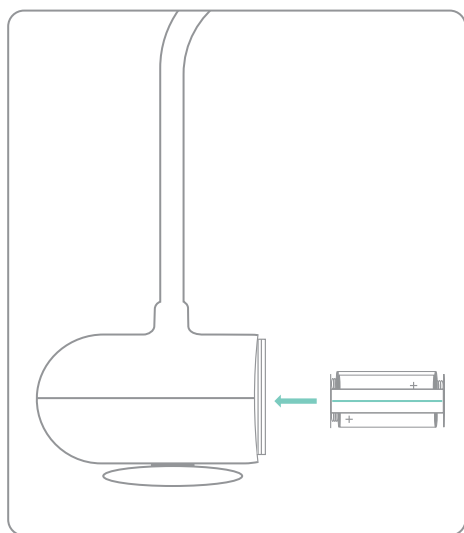


Step 5: Remove the battery support bracket and insert four AA batteries. We recommend using alkaline batteries for optimal performance.

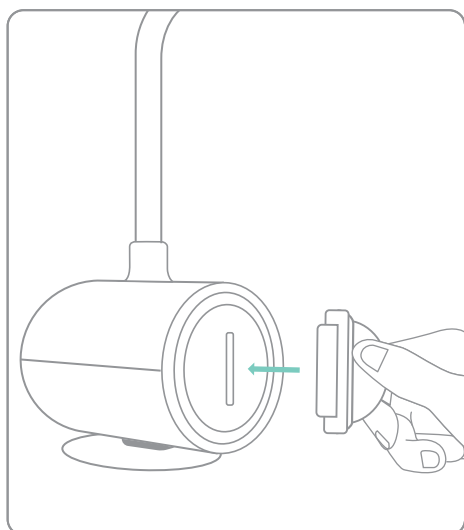

Step 6: Use the key to securely tighten the battery door, ensuring it is properly fastened.

Replacing the Battery

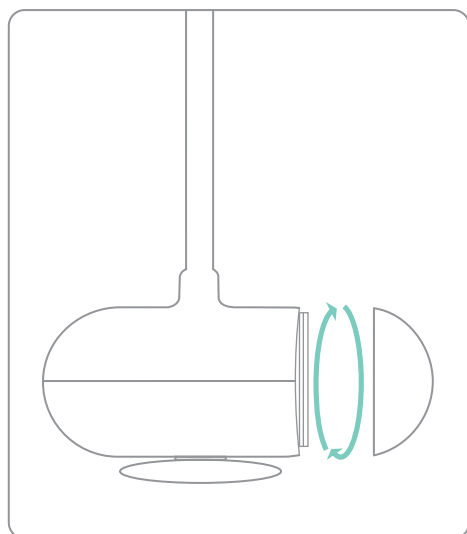


Step 7: Place the key back into the pump housing dock, and turn clockwise to lock the pump housing.

Operating Instructions

1. When ready to use, press the pump firmly into a body of water, making sure the water level is at the minimum indicated on the device.


Note: The suction cup should be placed on a smooth surface, as textured surfaces may not adhere as effectively.

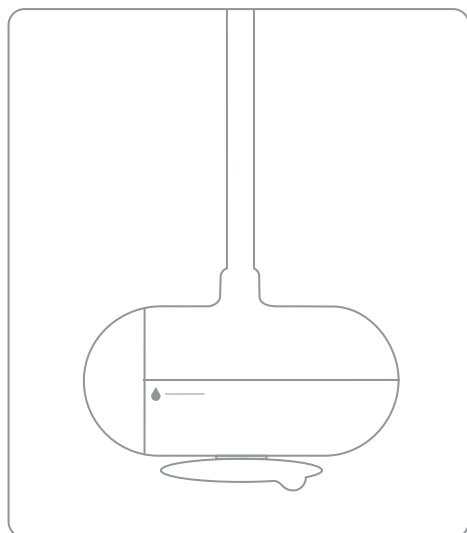

To remove the suction cup, pull on the side tab to detach it from any flat surface.


Operating Instructions

2. Press the side button on the sprayer to activate the water flow. Release the button to stop the flow.

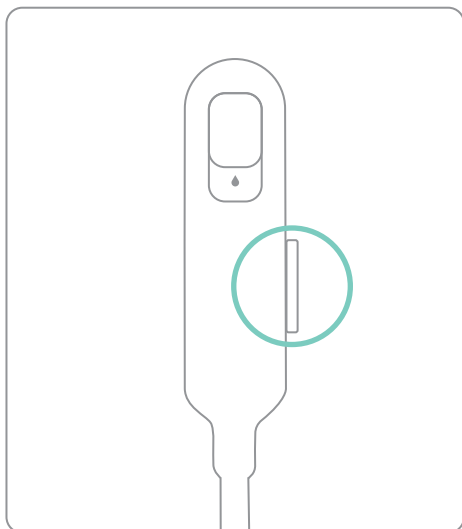


3. To switch between high and low flow rates, use the slider located at the top of the sprayer head.

- When two water droplets are visible, the sprayer is in **high** flow mode.

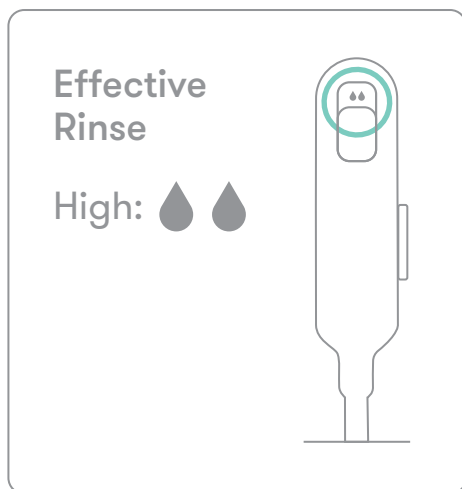


- When one water droplet is visible, the sprayer is in **low** flow mode.

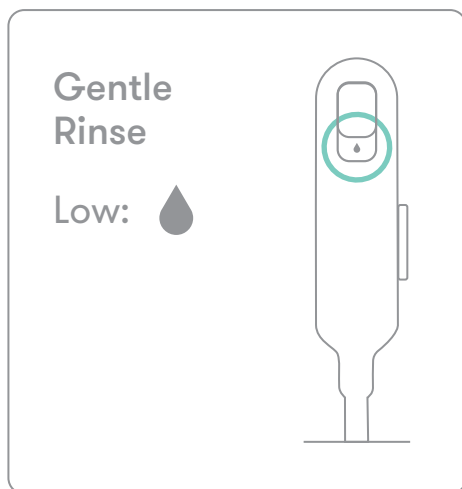

Operating Instructions

4. When using the massager accessories, simply slide them onto the top of the sprayer head. Ensure the sleeve is properly aligned with the spray nozzles for a smooth operation.

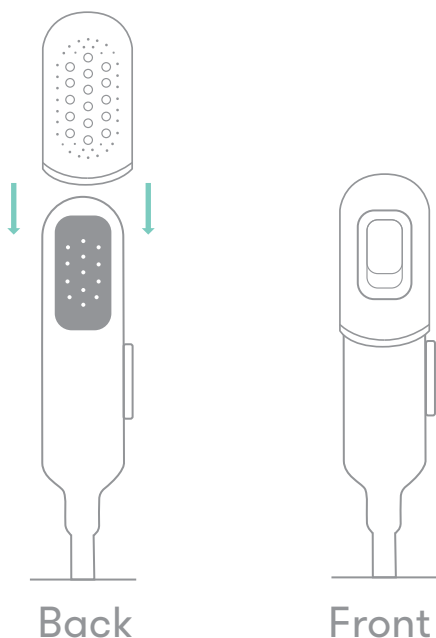

Care + Cleaning

AFTER EVERY USE:

- Always ensure that no water remains in the hose. Raise the sprayer pump out of the water and let it drain completely.
- If soapy water was used in the sprayer, run clean water through it before storing.
- Each time the battery is replaced, it is recommended to run the pump with distilled vinegar to clean any potential hard water buildup in the pump and water line. After running the pump with distilled vinegar, wash it with soapy water and then rinse with clean water to ensure the water line is thoroughly cleaned.

Care + Cleaning

- Ensure all water is removed from the hose by lifting the product out of the water and placing it on a dry towel.
- Allow the unit to air dry completely, then coil the hose using the cord hook and store the unit until the next use.

SILICONE BRUSHES:

- Each silicone brush sprayer accessory can be hand washed with soap and water.
- These silicone brushes are also safe to be placed in the top rack of the dishwasher for a deep clean.

Troubleshooting

1. Question: I can hear the pump working, but why is no water coming out?

Answer: Sometimes the water hose can get twisted during use or storage. Untwist the hose by either holding the pump body up above the sprayer handle and let the hose "unwind".

2. Question: Why after use does water still dribble out of the sprayer handle when placed down?

Answer: Water physics! Because this is a pump, it creates suction in the water hose. This suction continues to want to push the water out of the hose, even after use. After use, remember to either allow the water to drain out back into the water from the sprayer head, or lift the pump body out of the water to let it drain out!

Troubleshooting

2. Question: Why after use does water still dribble out of the sprayer handle when placed down?

Answer: Water physics! Because this is a pump, it creates suction in the water hose. This suction continues to want to push the water out of the hose, even after use. After use, remember to either allow the water to drain out back into the water from the sprayer head, or lift the pump body out of the water to let it drain out!

3. Question: If I lose the battery door key, how do I open to replace the batteries?

Answer: Battery door can be opened using a large coin or a flat head screwdriver.

4. Question: What if my pump stops working?

Answer: Replace with new batteries [4x AA batteries]. If pump does not work after replacing batteries contact customer service.

5. Question: Why has sprayer performance decreased over time?

Answer: Battery capacity will decrease over time. We recommend replacing batteries when performance is noticeably lower.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by fridababy could void the user's authority to operate the equipment.

frida baby®

Love it?

Leave a review.

fridababy.com

Not in love?

We've got you covered.

frida.com/help

Control The Flow Bath Sprayer

Model #: 13100100

4x AA Batteries

Country of Origin: China

Manufactured for

Fridababy LLC.

Miami, FL 33137 USA